# 16” HD LED TV with DVB-T/CI

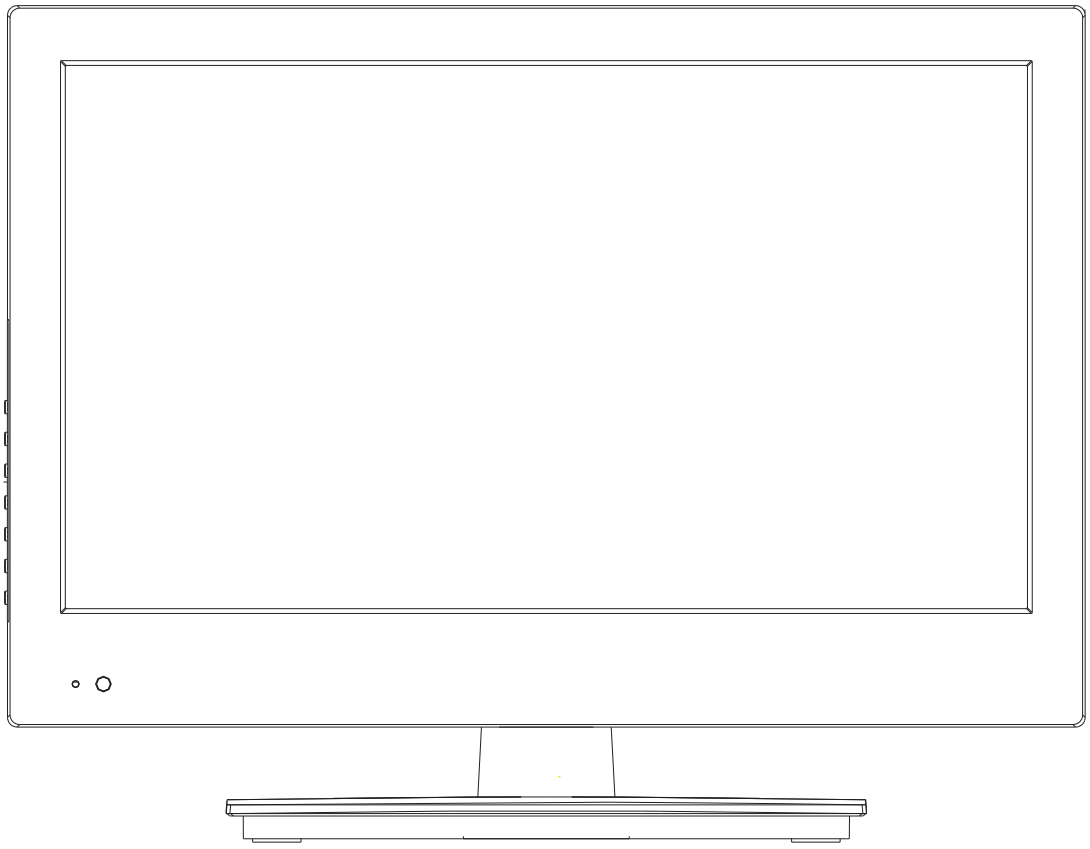

LTV 2016HD

# USER’S MANUAL

Read this manual carefully and retain for future reference

| | | | |
|---|---|---|---|
| 1 | PREFACE | | 3 |
| 2 | SAFETY PRECAUTIONS | | 3 |
| 3 | IN THE CARTON | | 5 |
| 4 | FRONT AND BACK CONNECTIONS OF THE TV | | 6 |
| 5 | BASIC INSTALLATION | Power Cord Connection | 7 |
| | | Antennas Connection | 7 |
| | | AV Connection | 8 |
| | | YPbPr Connection | 8 |
| | | VGA(PC) Connection | 9 |
| | | HDMI Connection | 9 |
| | | SCART Connection | 10 |
| | | MEDIA Connection | 10 |
| 6 | REMOTE CONTROL | Remote control instructions | 11 |
| | | Remote control setup | 14 |
| 7 | OSD menu | Select Input Source | 15 |
| | | DTV Menu | 16 |
| | | Picture Menu | 16 |
| | | Sound Menu | 18 |
| | | Channel Menu | 20 |
| | | Lock Menu | 23 |
| | | Setup Menu | 25 |
| | | ATV/SCART/HDMI/AV/YPbPr/PC Menu | 28 |
| | | Media（Multimedia）Menu | 29 |

| | | |
|---|---|---|
| 8 | **If you're having problems** | 32 |
| 9 | **Your TV's specification** | 34 |
| 10 | **Wall mounting assembly instruction** | 35 |

# 1. PREFACE

Thank you for buying this TV ! Please read this manual throughly before operating the TV.
Make sure the TV was not damaged in transit. Should the TV is damaged, do not install it and contact your dealer. Check that you have all the accessories according to the model.

# 2. SAFETY PRECAUTIONS

Put the TV on a stable surface.

Do not place any material on the TV.

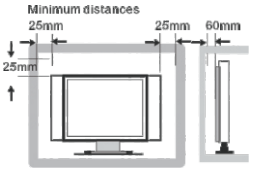


Do not use the TV with fixtures other than those provided or suggested by the manufacturer.

Do not block or cover the ventilation openings on the TV.
If you have a wall mount, check that it is steady.

Power cord and cables must be properly routed and protected to prevent people from stepping on them and causing the TV to fall.

Keep the TV dry and away from humidity.

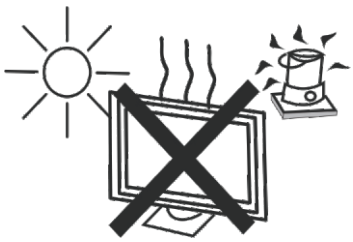

Keep the TV away from heat sources.

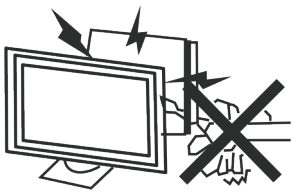

Unplug the TV before cleaning it. Do not use solvent or liquid to clean the TV.

Only clean the TV with a soft and dry cloth.

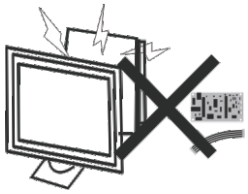

In case of troubleshooting, do not use spare parts other than those suggested by the manufacturer. Using inadequate spare parts can lead to electric shocks, short-circuits fire or other incidents.

Unplug the TV during lightening storms or when unused for long periods of time.

## 3. IN THE CARTON

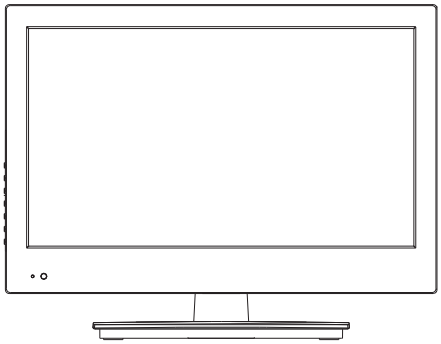

**TV SET**

**Remote Control**

User Manual

**User Manual**

Screw Driver and screws

**Switch Adaptor**

# 4.FRONT AND BACK CONNECTIONS OF LED TV

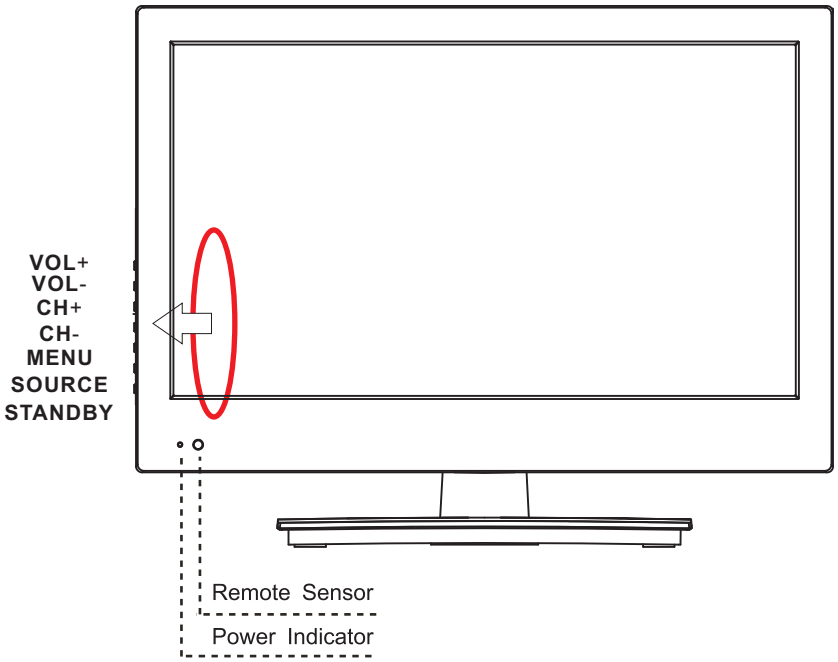


## Back View and Control Connections

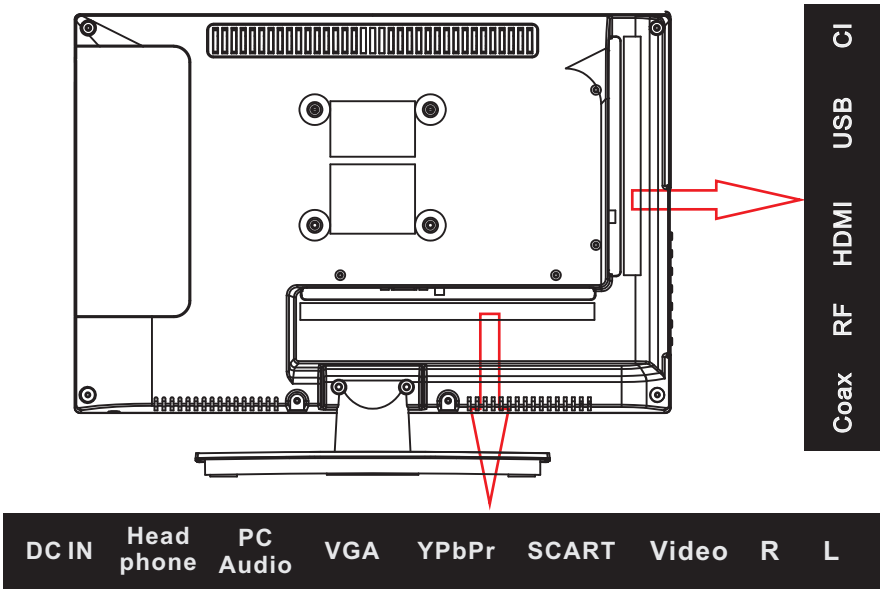


1.DC IN:Main power input.
2.Headphone:Connect the earphone.
3.PC AUDIO: Connect the Audio output jack of PC.
4.VGA: Connect the PC-RGB output jack of PC.
5.YPbPr: Connect the YPbPr output jack of DVD.
6.SCART: Connect the SCART jack of VCR or DVD.
7.Video: Connect the VIDEO output jack of DVD.
8.R/L: Connect the R/L audio output jack of DVD.
9.Coax:Connect the SPDIF a suitable amplifier.
10.RF: Connect the antenna.
11.HDMI: Connect the HDMI output jack of DVD.
12.USB: Connect to portable USB device.
13.CI: Connect to the CI card.

# 5. BASIC INSTALLATION

## Power Cord Connection

- Connect the power cord and AC adaptor correctly as shown.
- Press the STANDBY switch of your TV to switch the unit on. The power indicator on the front panel lights up in green or blue.

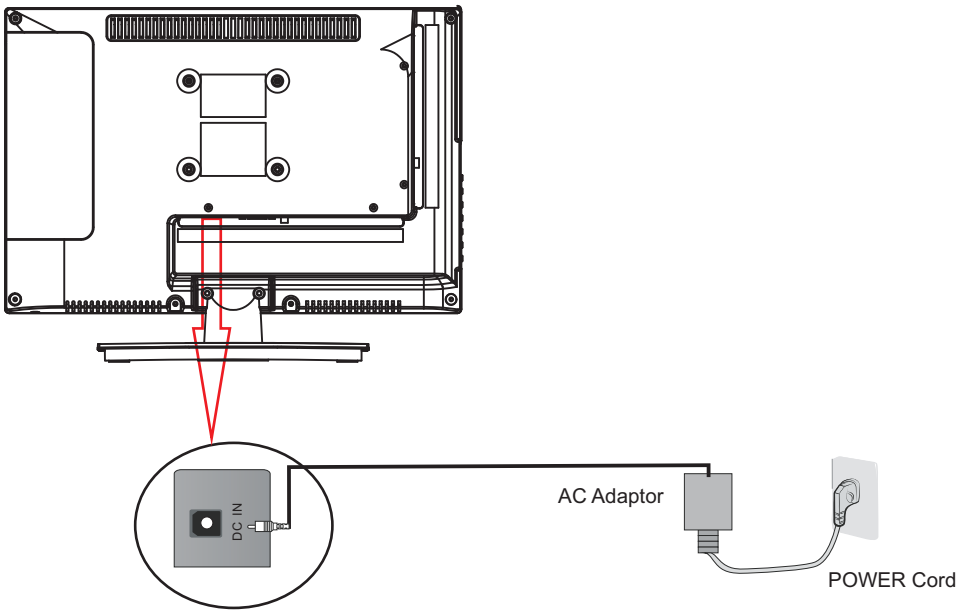


## Antennas Connection

To ensure good picture and sound, TV antenna system needs to be installed. The antenna system as shown can be sourced from TV equipment shops, which will provide service for correct installation and connection. After installation, insert the 75-OHM antenna plug into the antenna jack as shown.

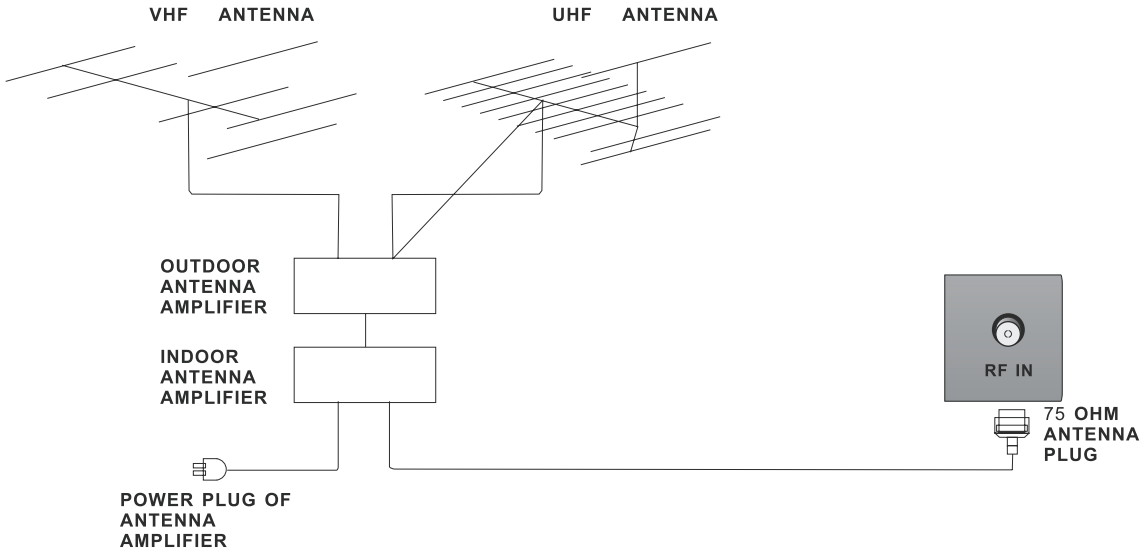

## AV Connection

Connect the VIDEO and AUDIO output jack of the DVD or VCR to the AV IN jacks on the set using the RCA cable (Yellow [video], White and RED [left & Right audio]).
Select the AV input source using the SOURCE button on the remote control.

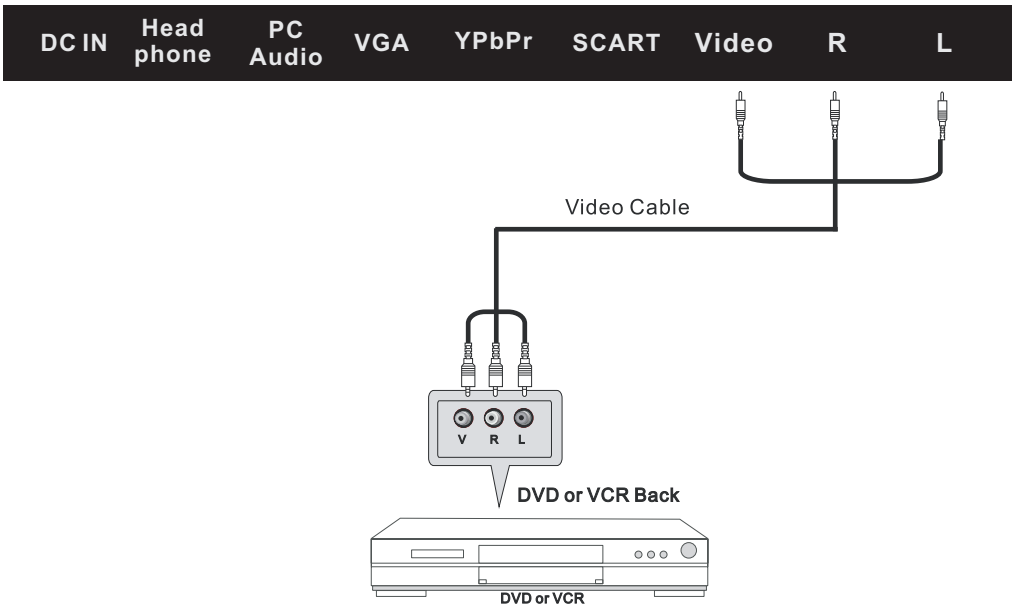


## YPbPr Connection

Connect the YPbPr/YCbCr output of the DVD or VCR to the YPbPr input on the set.The picture quality is improved compared to connecting a regular VCR to the video input. Connect the Audio output of the DVD or VCR to the Audio input jacks on the set using the RCA cable.(3.5mm plug-2 X RCA plug)
Match the jacks colours: Y is green, Pb is blue, Pr is red, Audio left is white and Audio right in red.
Select YPbPr input source using the SOURCE button on the remote control.

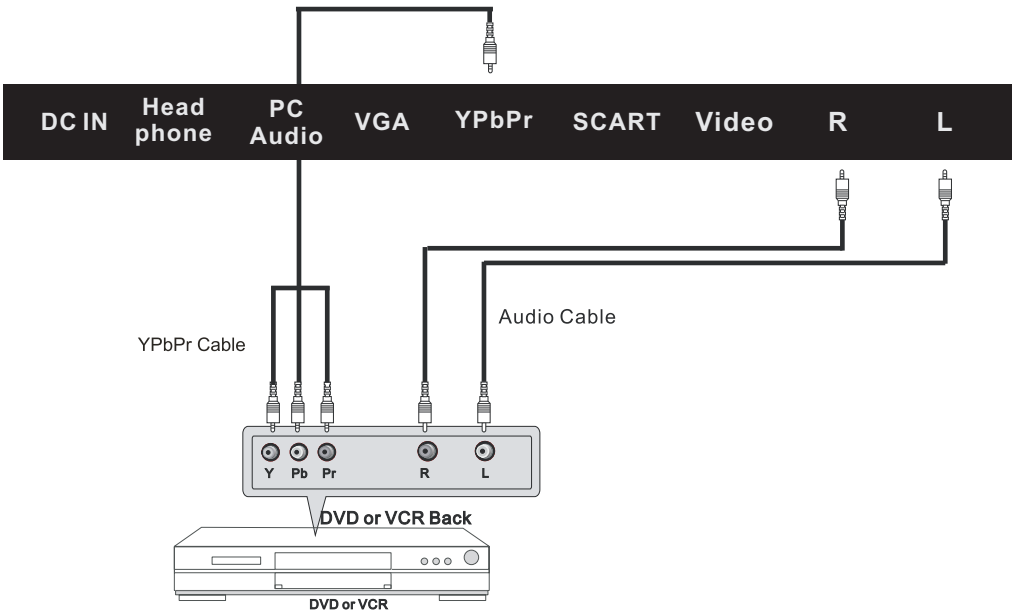

## VGA(PC) Connection

Connect the RGB output of the PC to the VGA jack on the set. Connect the AUDIO output of the PC to the PC AUDIO jack on the set. Select the PC input source using SOURCE button on the remote control.

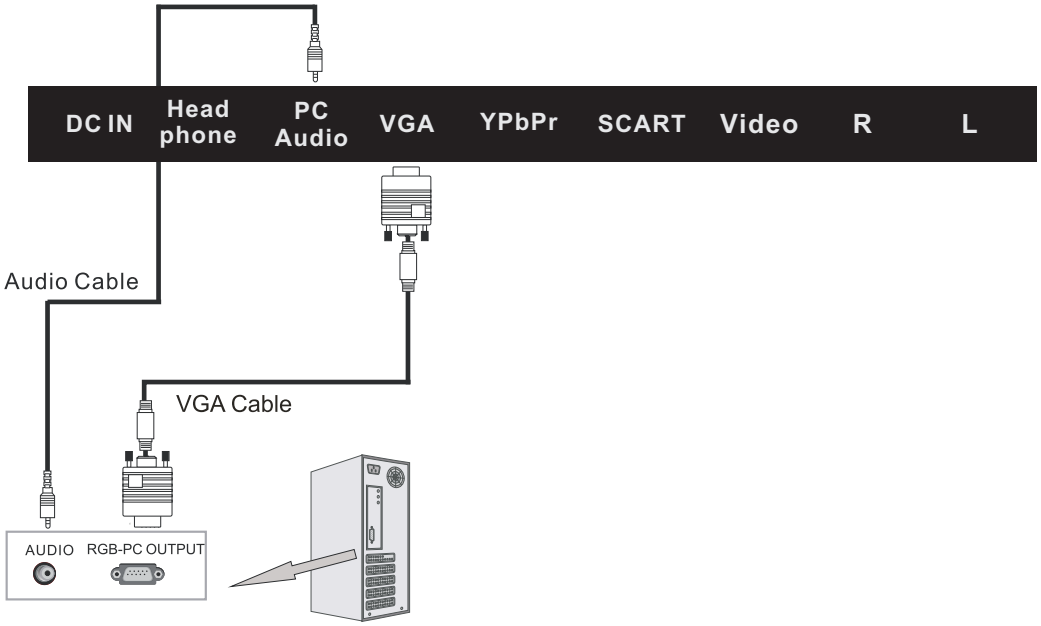


## HDMI Connection

HDMI connection allows the user to transfer both audio and video control signals through one cable only. These signals are transferred in digital.

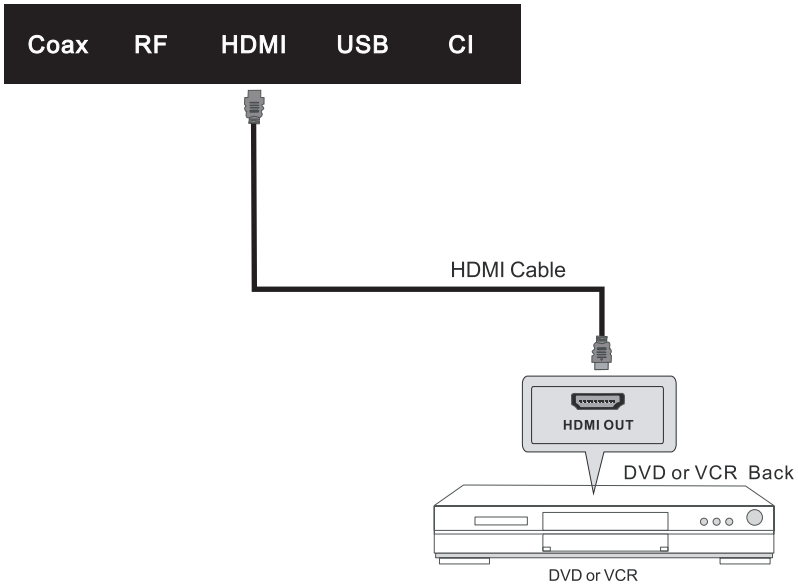

## SCART Connection

Connect the SCART connector on the external video device to the SCART connector on the LED TV using a SCART cable.

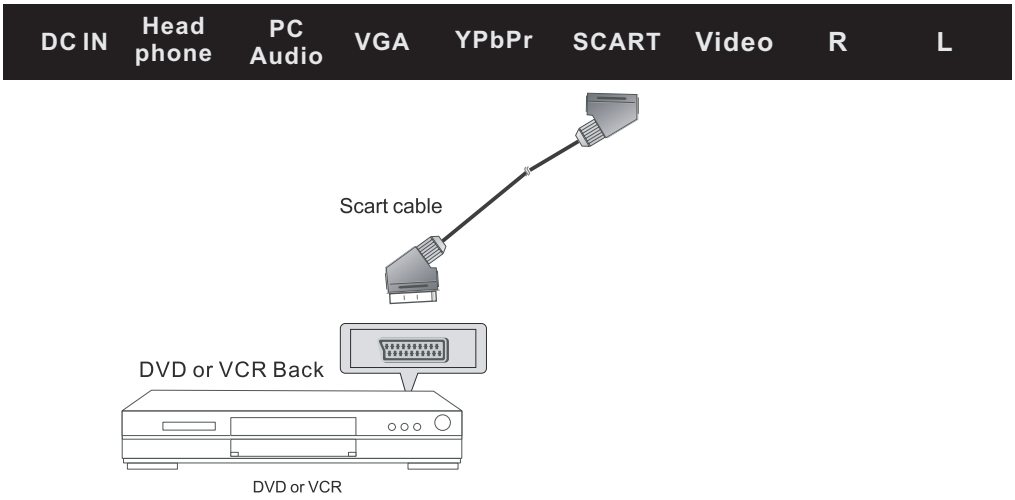


## MEDIA Connection

USB: Connect to portable usb device.

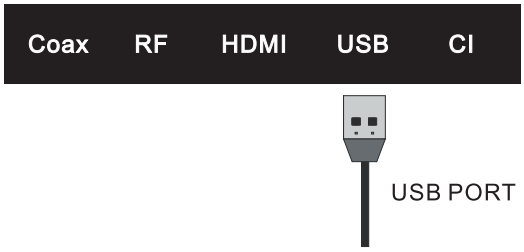

# 6. REMOTE CONTROL

## Remote control instructions

### Remote control instruction in TV mode

**STANDBY**
Press "STANDBY" button to turn standby mode on or off.

**MUTE**
Press to mute the sound. Press again or press V+ to unmute the TV.

**SOURCE**
Press to cycle through the input source.

**DTV**
Press to select DTV mode.

**PC**
Press to select PC mode.

**I/II**
Press to search the NICAM modes.

**SLEEP**
Select amount of time. Let your TV turn off automatically.

**NUMBER BUTTONS**
Press 0-9 to select a TV channel directly when you are watching TV. The channel change after 2 seconds.

⮌
Return to the previous channel viewed.

**DISPLAY**
Press to display the source and channel's information.

**THUMBSTICK(▲/▼/◄/►/OK)**
Allows you to navigate the on-screen menus and adjust the system settings to your preference.

**MENU**
Brings up the main TV menu to the screen.

**EXIT**
Exit the main TV menu to the screen.

**VOL+/VOL-**
Press to increase/decrease the sound level.

**CH+/CH-**
Press to scan through channels.

**ASPECT**
Press this button to chang the aspect of your TV.

# Remote control instructions

## Remote control instruction in TELETEXT mode

**NUMBER BUTTONS**
Press 0-9 to select a teletext page.

**TEXT**
Press to switch between TV and Teletext mode.

**SUBTITLE**
To display subtitle.

**HOLD**
Freeze the current page.

**SIZE**
Change the picture size.

**REVEAL**
Reveal or hide the hidden words.

**INDEX**
Request index page when index link is valid.

**SUBPAGE**
TELETEXT Subpage.

# Remote control instructions

## Remote control instruction in DTV mode

**NUMBER BUTTONS**
Press 0-9 to select a channel.

**TV MENU**
Brings up the main DTV menu to the screen.

**DISPLAY**
Press to display the source and channel's information.

**THUMBSTICK(▲/▼/◄/►/OK )**
Allows you to navigate the on-screen menus and adjust the system settings to your preference.

**CH+/CH-**
When watching a channel, changes the channel.

**COLOUR BUTTONS**
Colour buttons ( respectively red, green, yellow and blue ) used in a few sub-menus.

**SUBTITLE**
To display subtitle.

**SIZE**
Change the picture format.

**FAV**
Press to increase/decrease your favourite program in DTV mode.

**TV/RADIO**
Select TV or Radio modes.

⏯
PLAY/PAUSE in TIMESHIFT and MEDIA mode.

⏮ ⏭
Jump to previous and next track in MEDIA mode.

◀◀ ▶▶
Fast reverse and forward key in MEDIA mode.

■
Stop in MEDIA mode or exit the REC or TIMESHIFT mode.

## Remote control setup

1. Open the cover.
2. Your remote requires 2X AAA Batteries. When inserting the batteries, make sure correct polarity marks"+"and "-" on the batteries match the diagram as shown within the battery compartment.
3. Replace the battery cover.

To prevent battery leakage which may result in bodily injury or damage to the remote:
1. Install all batteries correctly, and as marked on the remote control.
2. Do not mix batteries: (OLD and NEW or CARBON and ALKALINE, etc)
   Remove batteries when the remote is not used for a long time.
3. Recommended use ALKALINE type batteries.

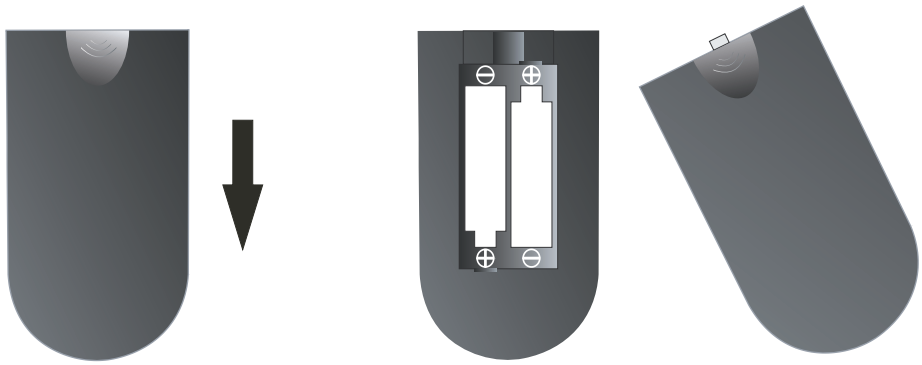

## Select Input Source

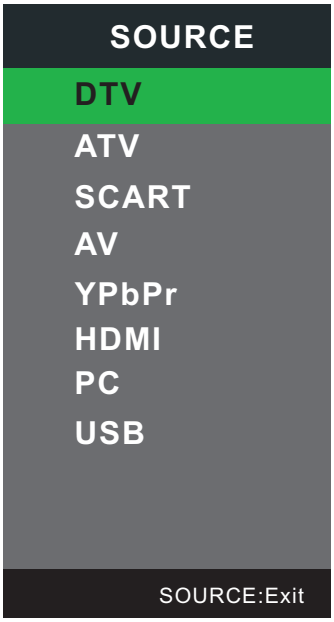


## Basic Operation

Press SOURCE button on the remote control to display the input source list.

Press ▼ / ▲ button to select the input source you want to watch.

Press **OK** button to enter the input source.

Press **EXIT** button to quit.

## Picture Menu

Press **MENU** button to display the main menu.

Press ◄ / ► button to select **PICTURE** in the main menu,it will highlight the first option.

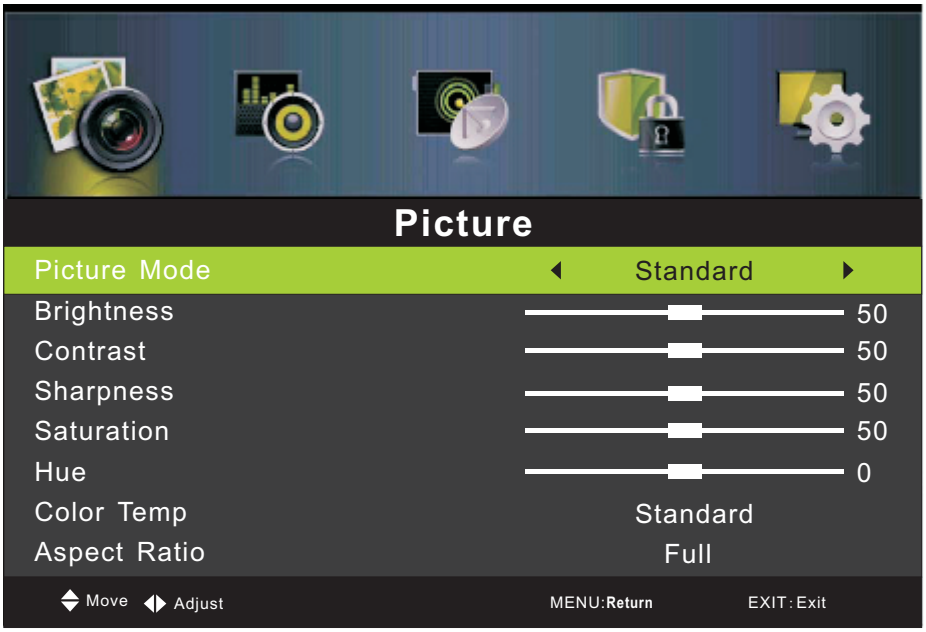


1. Press ▼ / ▲ button to select the option that you want to adjust in the **PICTURE** menu.
2. Press ◄ / ► button to adjust.
3. After finishing your adjustment, Press **MENU** button to return back to the previous menu.

**Picture Mode**

Press ▼ / ▲ button to select **Picture Mode**, then press **OK** button to enter sub-menu.Press ▼ / ▲ button to select. (Available Picture mode: Dynamic, Standard,Mild,Personal).
You can change the value of contrast, brightness, color and sharpness when the picture is in Personal mode.
TIPS: You can press **PMODE** button on the remote control to change the Picture Mode directly.

**Brightness**

Press ▼ / ▲ button to select **Brightness**,then press **OK** button to enter sub-menu.Press ◄ / ► button to adjust.

**Contrast**

Press ▼ / ▲ button to select **Contrast**,then press **OK** button to enter sub-menu.Press ◄ / ► button to adjust.

**Sharpness**

Press ▼ / ▲ button to select **Sharpness**,then press ◄ / ► button to adjust.

**Saturation**

Adjust the saturation of the color based on your own like.

**Hue**

Use in compensating color changed with the transmission in the NTSC code.

**Color Temp**

Press ▼ / ▲ button to select **Color Temperature**,then press ◄ / ► button to select. (Available Color Temperature: Standard,Cool,Warm).

**Aspect Ratio**

Press ▼ / ▲ button to select Aspect Ratio ,then press ◄ / ► button to select. (Available Aspect Ratio:Full,Zoom1,Zoom2,4:3).

**Advanced Settings**

**NR(Noise Reduction)**

Press ▼ / ▲ button to select **NR(Noise Reduction)**,then press ◄ / ► button to select.(Available options: Off,Weak, Medium,Strong).

**MPEG NR(Noise Reduction)**

Press ▼ / ▲ button to select **MPEG NR(Noise Reduction)**,then press ◄ / ► button to select. (Available options: Off,Weak,Medium,Strong).

**Dynamic Contrast**

Press ▼ / ▲ button to select **Dynamic Contrast**,then press ◄ / ► button to select. (Available options: Off,Weak ,Medium,Strong).

## Sound Menu

Press **MENU** button to display the main menu.

Press ◄ / ► button to select **Sound** in the main menu,it will highlight the first option.

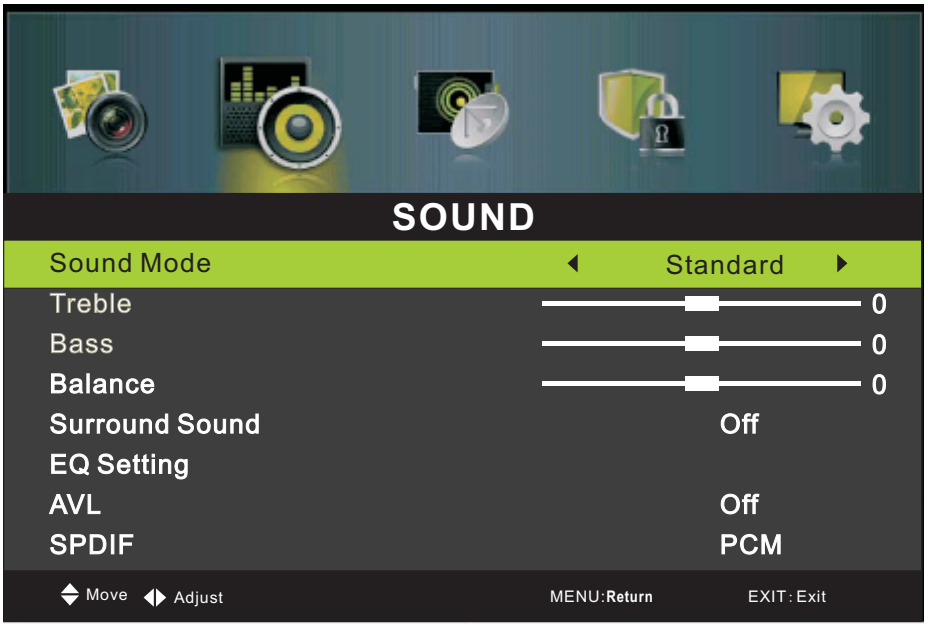


1. Press ▼ / ▲ button to select the option that you want to adjust in the **SOUND** menu.
2. Press ◄ / ► button to adjust.
3. After finishing your adjustment, Press **MENU** button to return back to the previous menu.

**Sound Mode**

Press ▼ / ▲ button to select **Sound Mode**, then press **OK** button to enter sub-menu.Press ▼ / ▲ button to select.
(Available Sound mode: Standard,Music,Movie,Personal).
You can change the value of Treble and Bass when the sound is in Personal mode.
TIPS: You can press **SMODE** button on the remote control to change the Sound Mode directly.

**Treble**

Press ▼ / ▲ button to select **Treble**,then press **OK** button to enter sub-menu.Press ◄ / ► button to adjust.

**Bass**

Press ▼ / ▲ button to select **Bass**,then press **OK** button to enter sub-menu.Press ◄ / ► button to adjust.

**Balance**

Press ▼ / ▲ button to select **Balance**,then press **OK** button to enter sub-menu.Press ◄ / ► button to adjust.

**Surround Sound**

Press ▼ / ▲ button to select **Surround Sound** ,then press ◄ / ► button to select On or Off.

**EQ Setting**

Press ▼ / ▲ button to select EQ Setting, then press **OK**/►button to enter submenu.

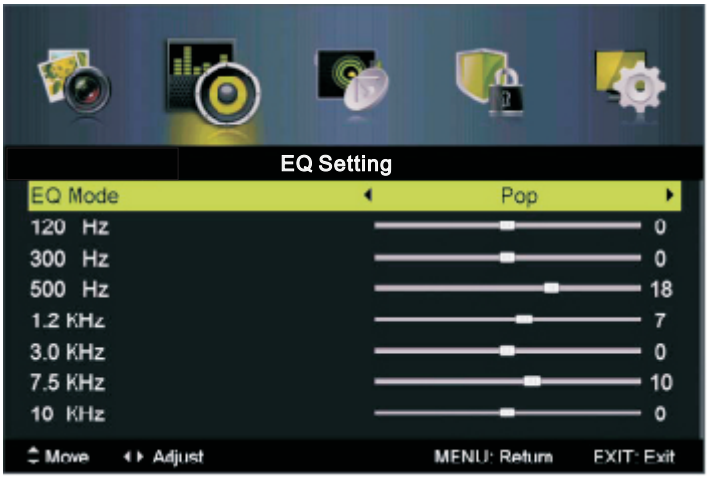


**AVL**

Press ▼ / ▲ button to select **AVL** ,then press ◄ / ► button to select On or Off.

**SPDIF**

Press ▼ / ▲ button to select **SPDIF** ,then press ◄ / ► button to select Off,Auto,PCM.

**Audio Description**

Press ▼ / ▲ button to select **Audio Description**, then press **OK**/►button to enter submenu.

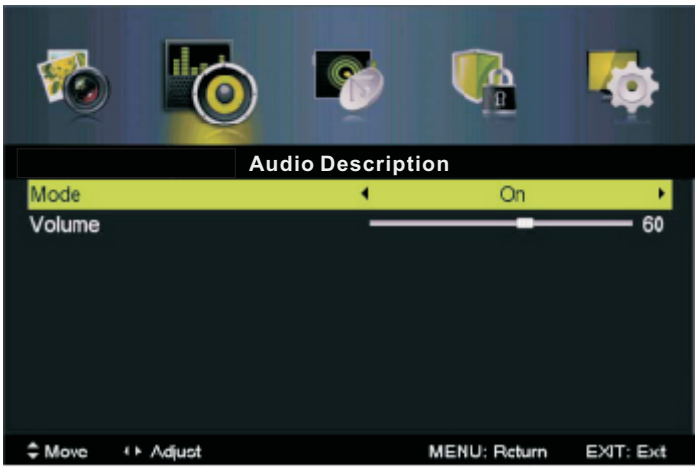


**Sound Type**

Press ▼ / ▲ button to select **Sound Type** ,then press ◄ / ► button to select .

## Channel Menu

Press **MENU** button to display the main menu.
Press ◄ / ► button to select **CHANNEL** in the main menu,it will highlight the first option.

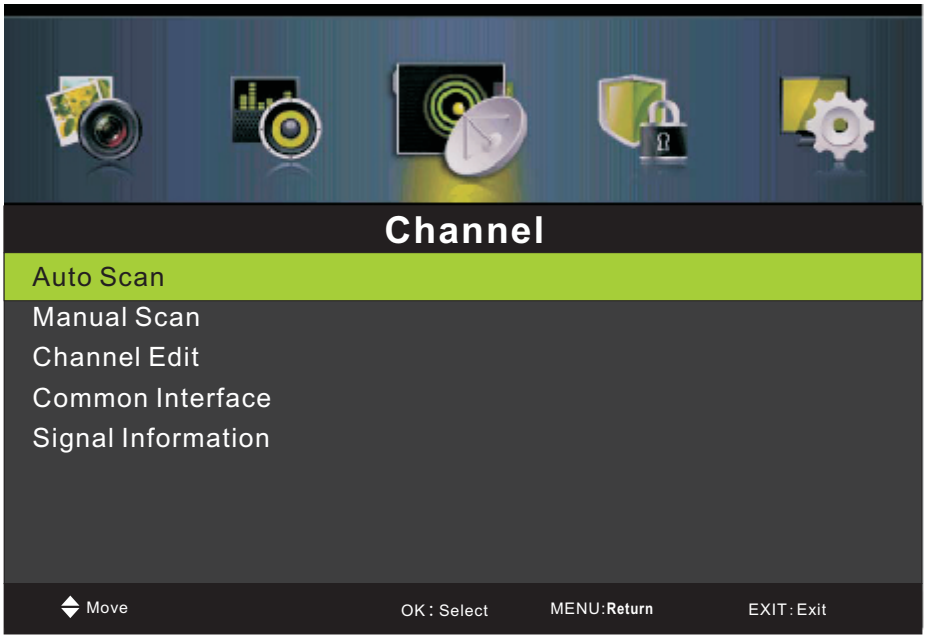


1. Press ▼ / ▲ button to select the option that you want to adjust in the **CHANNEL** menu.
2. Press ◄ / ► button to adjust.
3. After finishing your adjustment,Press **MENU** button to return back to the previous menu.

**Tuner Type**

Press ▼ / ▲ button to select **Tuner Type**,then press ◄ / ► button to select Air or Cable.

**Auto Scan**

Press ▼ / ▲ button to select **Auto Scan**, then press **OK**/►button to enter submenu.
(The default password is 0000)

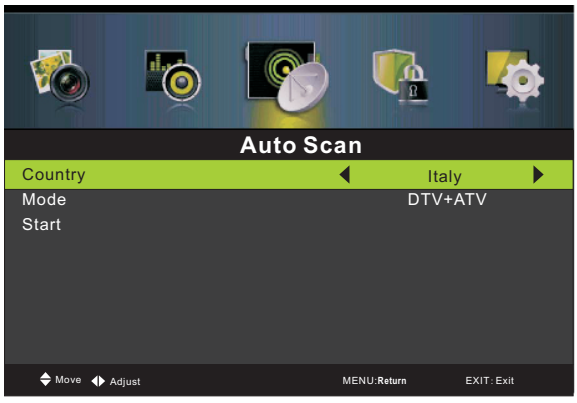

**Manual Scan**

Press ▼ / ▲ button to select **Manual Scan**, then press **OK**/► button to enter submenu.

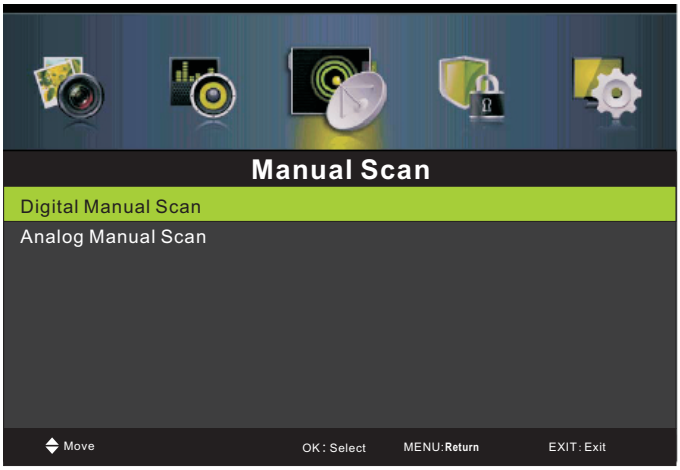


**Digital Manual Scan**

Press ▼ / ▲ button to select Digital Manual Scan, then press **OK**/► button to enter submenu.

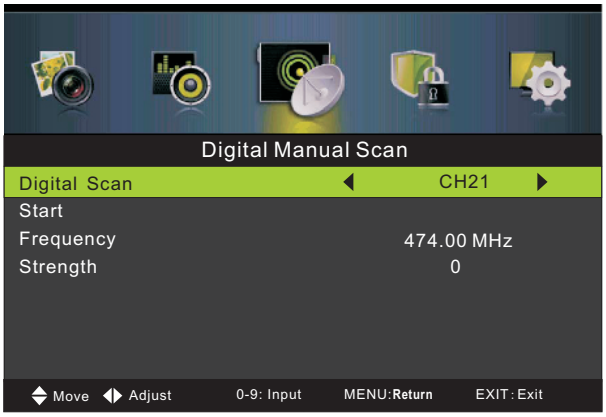


**Analog Manual Scan**

Press ▼ / ▲ button to select **Analog Manual Scan**, then press **OK**/► button to enter submenu.

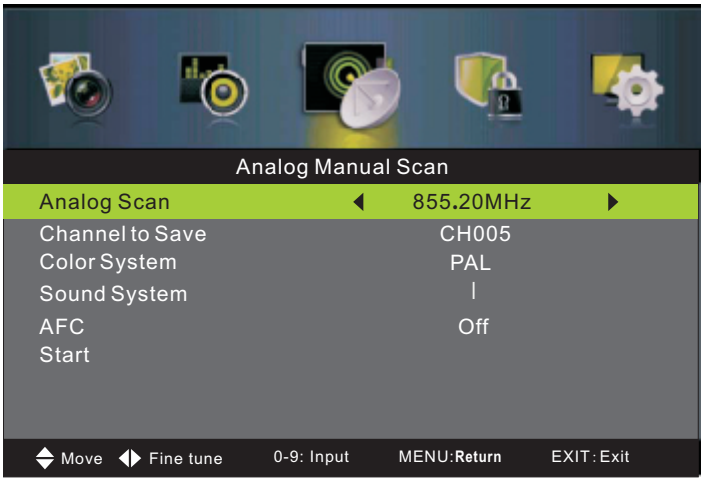

**Channel Edit**

Press ▼ / ▲ button to select **Channel Edit**, then press **OK**/►button to enter submenu.

The three colored key is the shortcut key for programming the channel.
First press▼ / ▲ to highlight the channel you want to delete or move or skip, then:
Press the **Red** button to delete the channel.
Press the **Green** button to skip the select channel.
(Your TV set will skip the channel automatically when using CH+/- to view the channels.)
Press the **Blue** button to to set the channel to moving state. then press▼ / ▲ to move it to the position you want to put.

**Common Interface**

Press ▼ / ▲ button to select **Common Interface**, then press **OK**/►button to enter submenu.

Only available when there is CI card under DTV.

**Signal Information**

Press ▼ / ▲button to select Signal Information, then press the **OK** button to see the detail information about the signal. Only available when there is signal under DTV.

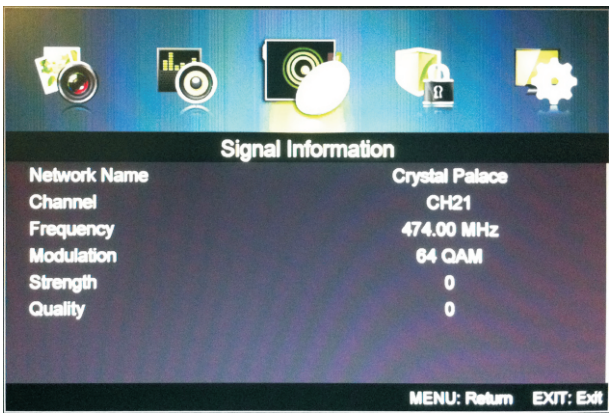

## Lock Menu

Press **MENU** button to display the main menu.

Press ◄ / ► button to select **LOCK** in the main menu,it will highlight the first option.

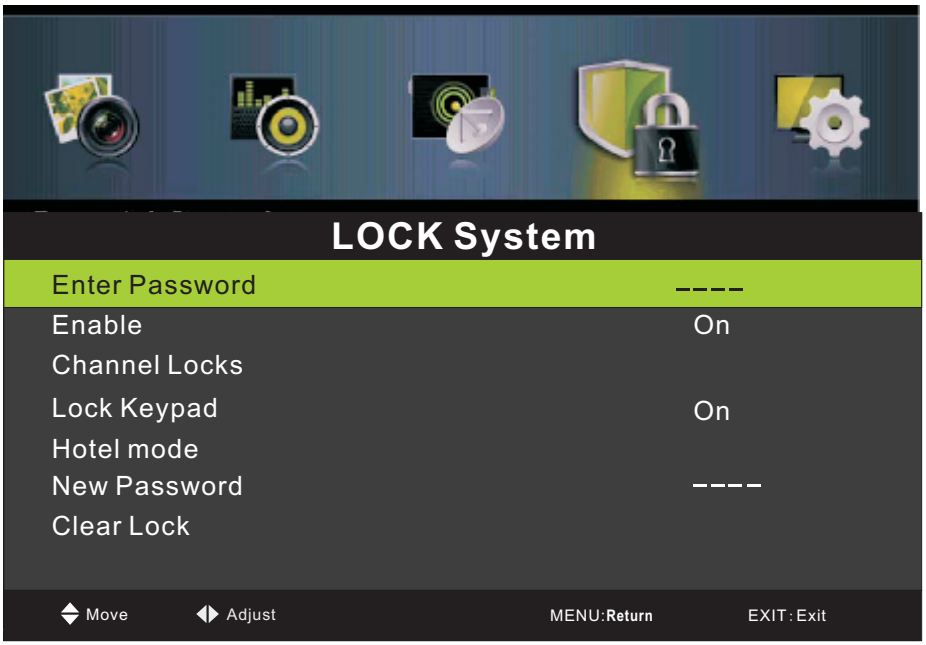


1. Press ▼ / ▲ button to select the option that you want to adjust in the **LOCK** menu.(Default Password:0000)
2. Press ◄ / ► button to adjust.
3. After finishing your adjustment, Press **MENU** button to return back to the previous menu.

**Enter Password**

Press ▼ / ▲ button to select **Enter Password**, then press **OK** button to make the following 4 options valid. (Default password is '0000'.)

**Enable**

Press ▼ / ▲ button to select **Enable**,then press ◄ / ► button to select On or Off.

Channel Locks,Parental Rating and Lock Keypad are available when Enable is On

**Channel Locks**

Press ▼ / ▲ button to select **Channel Locks**, then press **ok**/►button to enter submenu.

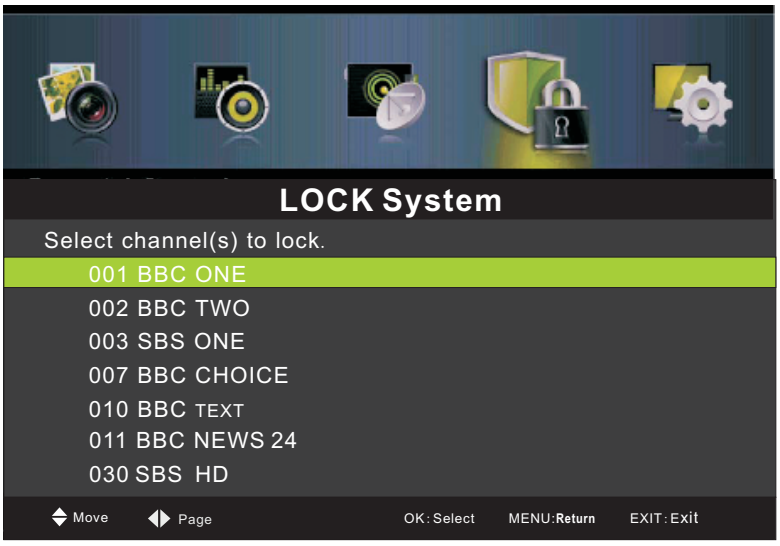

**Lock Keypad**

Set to prevent it from being used by young child ren,or other unexpected usage.
Press ▼ / ▲ button to select Lock Keypad , then press◄ / ► button to selec On or Offt.

**Hotel Mode**

Press ▼ / ▲ button to select **Hotel Mode**, then press **OK**/►button to enter submenu.

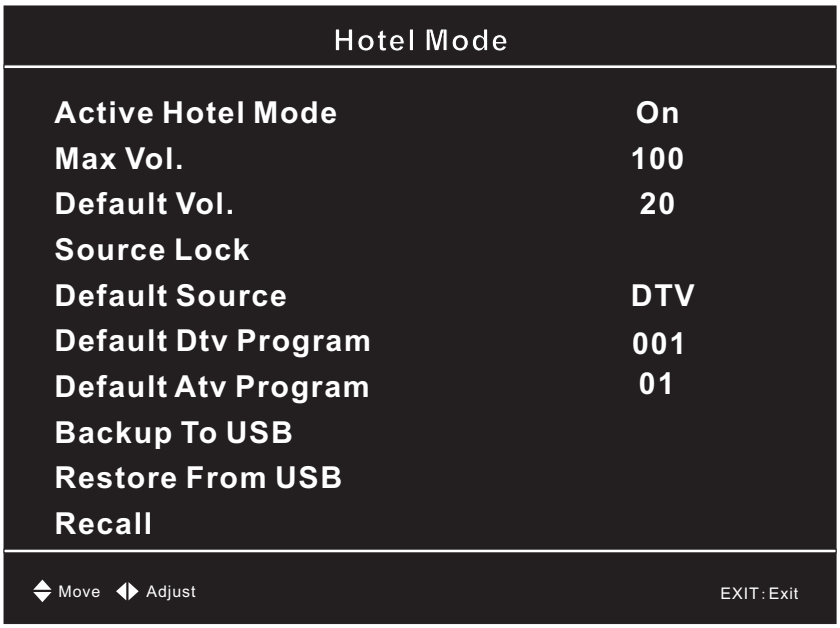


**New Password**

Press ▼ / ▲ button to select New Passwor,,then enter a 4-digital number you want to set twice

**Clear Lock**

Press ▼ / ▲ button to select **Clear Lock** , then press ◄ / ► button to select.

## Setup Menu

Press **MENU** button to display the main menu.

Press ◄ / ► button to select **SETUP** in the main menu, it will highlight the first option.

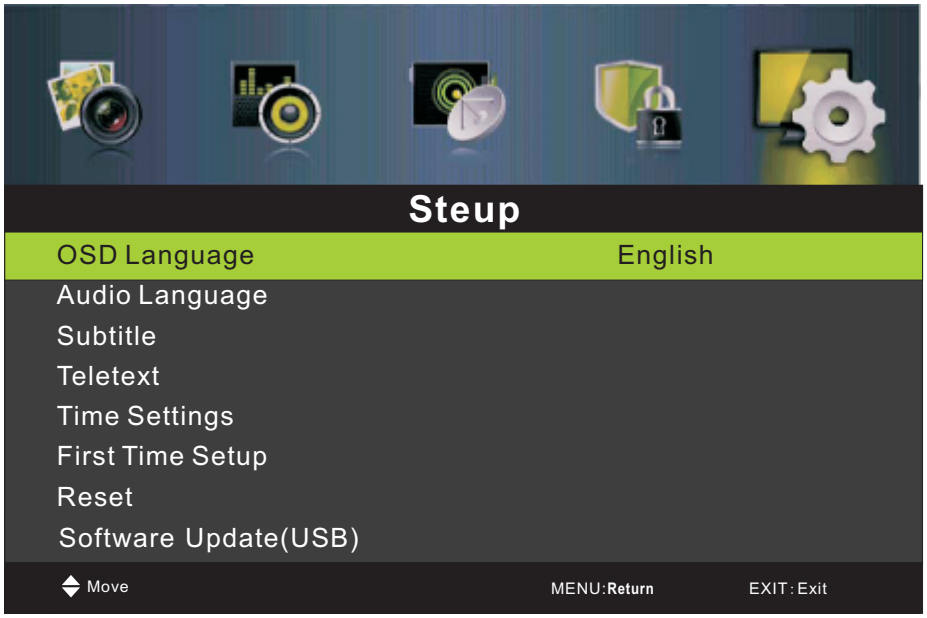


**OSD Language**

Press ▼ / ▲ button to select OSD Language, then press **OK** button to enter sub-menu. Press ▼ / ▲ /◄ / ►button to select OSD Language.

**Audio Language**

Press ▼ / ▲ button to select **Audio Language,**then press **OK** button to enter submenu.

Press ▼ / ▲ /◄ / ► button to select the Audio Primary Language and Audio Secondary Language

**Subtitle**

Press ▼ / ▲ button to select **Subtitle,**then press **OK** button to enter submenu.

**Teletext**

Adjust Teletext settings. Only availa ble under DTV and ATV source.
Press ▼ / ▲button to select Teletext, then press **OK**/► button to enter submenu.

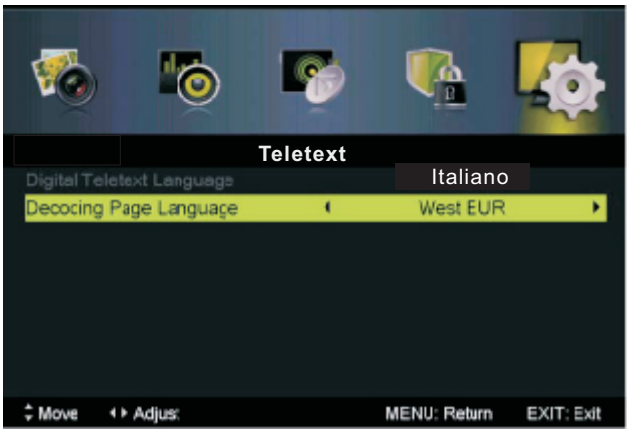


Under DTV source,press◄ / ►button to select Digital Teletext Language
Under ATV source,press◄ / ► button to select Decoding Page Language

**Time Settings**

Press ▼ / ▲ button to select **Time Settings,**then press **OK** button to enter submenu.

First Time Setup
Press ▼ / ▲ button to select First time Setup, then press **OK** button to enter. (Default Password:0000)

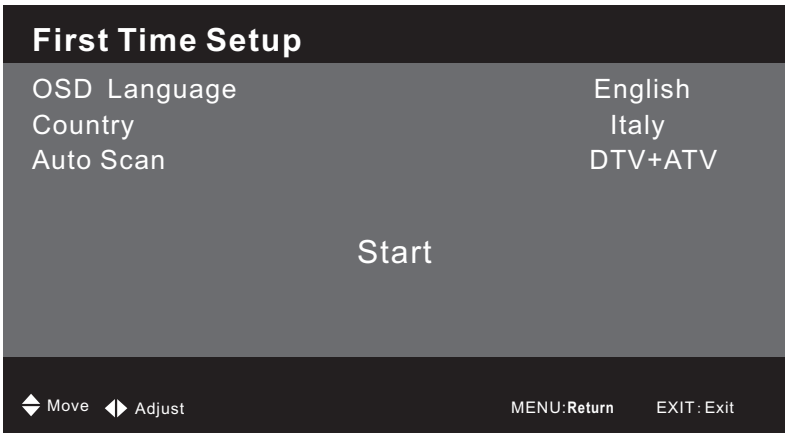


**Reset**
Press ▼ / ▲ button to select Reset, then press **OK** button to enter

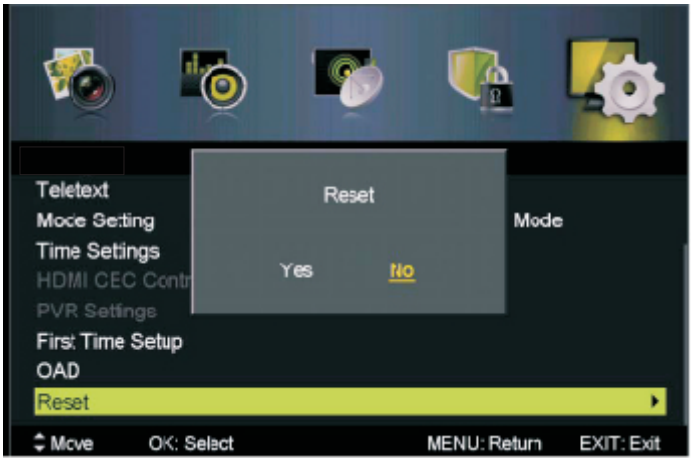


If you are sure to reset,press Yes to reset

**Software Update(USB)**
This menu lets you install the software/firmware onto the television.

# ATV /SCART/HDMI/ AV/YPbPr/PC

1.PC Setting in PICTURE menu is aviliable in **PC Input** only.Screen Mode in PICTURE menu and HDMI CEC Control in SETUP menu is aviliable in **HDMI Input** only.

2. Audio Description and Sound Type in AUDIO menu is invalid.

3. SCART/HDMI/AV/YPbPr/PC mode has no CHANNEL menu.

4.Parental Rating and Channel Locks in PARENTAL CONTROL menu is invalid for SCART/HDMI/AV/YPbPr mode.Parental Rating is invalid for ATV mode.PC mode has no PARENTAL CONTROL menu.

5.Audio Languages, Subtitle and PVR Settings in SETUP option are invalid for SCART/AV/PC mode.Audio Languages, Subtitle,Teletext PVR Settings in SETUP option are invalid for HDMI/YPbPr mode.

## Media Menu

Note: Before operating **USB** menu,Plug in USB device, then press **INPUT** button to set the Input Source to **USB** .

Press ◄ / ► button to select **USB** in the Source menu, then press **ok** button to enter.

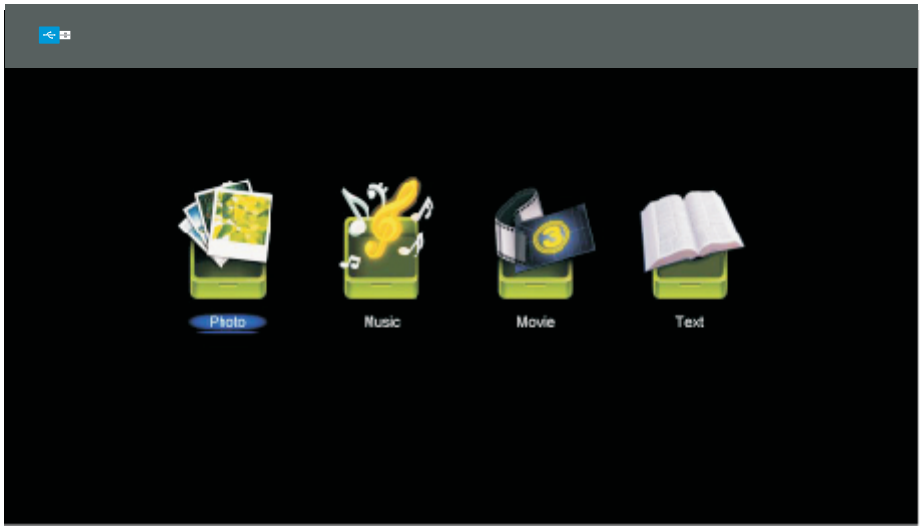


Press ◄ / ► button to select the option you want to adjust in the main **USB** menu, then press **OK** button to enter.

# Photo

Press ◄ / ► button to select PHOTO in the main menu, then press **OK** button to enter.

Press ◄ / ► button to select drive disk you want to watch, then press **OK** button to enter.

Press◄ / ► button to select return option to back to the previous menu.

# Music

Press ◄ / ► button to select MUSIC in the main menu, then press **ok** button to enter.
Press ▼ / ▲ button to select drive disk you want to watch, then press **ok** button to enter.
Press ▼ / ▲ button to select return option to back to the previous menu.

When highlighting the option you select, the file information will appear on the right.

# Movie

Press ◄ / ► button to select MOVIE in the main menu, then press **ok** button to enter.
Press ▼ / ▲ button to select drive disk you want to watch, then press **ok** button to enter.
Press ▼ / ▲ button to select return option to back to the previous menu.

# Text

Press ◄ / ► button to select TEXT in the main menu, then press **ok** button to enter.
Press ▼ / ▲ button to select drive disk you want to watch, then press **ok** button to enter.
Press ◄ / ► button to select return option to back to the previous menu.

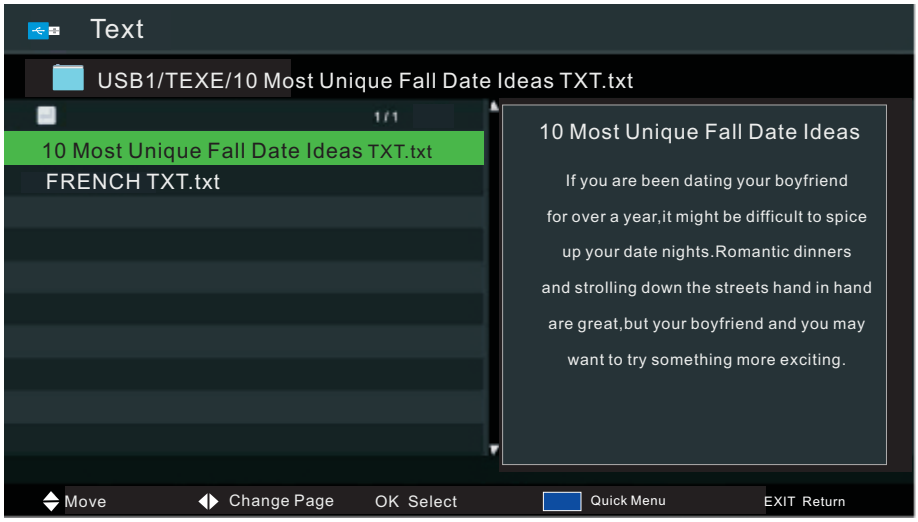
Text
USB1/TEXE/10 Most Unique Fall Date Ideas TXT.txt
1/1
10 Most Unique Fall Date Ideas TXT.txt
FRENCH TXT.txt
10 Most Unique Fall Date Ideas
If you are been dating your boyfriend
for over a year,it might be difficult to spice
up your date nights.Romantic dinners
and strolling down the streets hand in hand
are great,but your boyfriend and you may
want to try something more exciting.
Move
Change Page
OK Select
Quick Menu
EXIT Return

When highlighting the option you select, the file information will appear on the right.

Unœil, Deuxyeux, Troisyeux
Il était une fois une femme qui avait trois filles. L'aînée s'appelait Unœil parce quelle n'av
ait qu'un œil unique au milieu du front, et la seconde s'appelait Deuxyeux parce qu'elle avait ses d
eux yeux comme tout le monde, tandis que cadette se nommait Troisyeux parce quelle avait trois yeux
, ayant elle auss un oel au milieu du front, telle sa aînée. Mais comme Deuxyeux nétait pas faite
autrement que les autres gens, ni ses sœurs ni sa mère ne pouvaient la souffrir. " Toi, avec tes de
ux yeux, lui disaient-elles, tu ressembles à tout le monde et tu n'es pas des nôtres! " Elles ne fai
saient que de la malmener et maltraiter, la bousculaient et la chassaient toujours dans les coins, n
e lui laissaient que de vieilles rusques pour s'habiller, ne lui donnaient que leurs restes à mange
r, et encore juste de quoi ne pas mourir de faim. Eref, c'était leur souffre-douleur.
Or, il advint qu'un jour, comme Deuxyeux s'en était allée garder la chèvre dans les prés, la fa
im dont elle souffrait la fit pleurer, parce qu'une fois de plus ses deux sœurs ne lui avaient donné
que trop peu. Assise dans l'herbe, la pauvre pleura et pleura tellement qu'elle avait deux petits r
uisseaux qui lui coulaient sur les joues. Mais quand elle leva les yeux pour implorer le ciel dans s
a détresse, elle vit devant elle une dame qui lui demanda :
- Deuxyeux, pourquoi pleures-tu ?
- Comment pourrais-je ne pas pleurer ? lui répondit Deuxyeux. Sous prétexte que j'ai deux yeux
comme tout le monde, mes deux sœurs et ma mère ne peuvent pas me souffrir et me font toutes les misè
res ; elles me chassent de partout, m'habillent de loques et ne me donnent pas assez à manger : je n
Previous/Next
0-9: Goto Page
Quick Menu
EXIT Back

## If you're having problems

If you are having problems with your TV, carry out the following checks first.
If you are still having problems, unplug your TV and contact the service centre.

### Problems and how to fix them

**There is no sound and no picture coming from my TV.**
-Check that you have connected the TV power cord properly and switched the wall socket on.
-Check that the power switch at the rear of the TV is set to ″ON″.
-Check that you have turned on the POWER button on your TV.
-Check the picture contrast and brightness setting.

**There is a normal picture but no sound coming from my TV.**
-Check that your TV is not muted or has the volume down.
-Switch the channel, the problem may be with the channel you're on, not the TV.
-Check that your audio cable input has been plugged in properly. If you are using an external amplifier .

**The remote control does not work.**
-Check to see if there is any object between your TV (such as a piece of furniture) that could block the remote control from connecting with the sensor on your TV.
-Have you put the batteries into the remote control the right way? ( So + to + and - to -)
-Correct remote operating mode was set (such as TV or VCR).
-The TV is not positioned in bright sunlight.
-Try fitting new batteries if none of the above work.

**The TV has turned off suddenly.**
-Check that you have not set the sleep timer.
-Check that you have not set the timer to control the socket which has your TV power cord on.
-Check that you have not set auto standby with the broadcast signal source which is connected to your TV.

**The picture on my TV appears slowly after I have switched it on.**
This is normal. The image takes a few seconds to appear after you have switched the TV on. Please contact your service centre if picture has not appeared after five minutes.

**There is no or poor quality colour or a poor picture on my TV.**
-Change the colour setting on the PICTURE MENU.
-Keep a distance between your TV and any VCR you may be using
-Try watching another channel. The problem may be with the channel you're watching.
-Are the video cables installed properly?
-Change the setting of picture brightness on PICTURE MENU.

**There are horizontal and vertical bars on the screen, the picture is shaking.**
-Check if any signal interference activities is going on nearby, such as an electrical appliance or power tool is in operation.

**The reception is poor on some channels.**
-The TV channel you're watching may be having problems. Change to another channel and see if the same is happening.
-TV broadcasting signal is weak or has been interrupted.
-Check whether signal sources have any possible interference.

**There are lines or streaks on the pictures.**
-Check if there is any damage to the aerial on the roof, try to change the direction of the aerial to receive a better signal.

**One of the TV's speakers does not work.**
-Check the sound balance setting on SOUND MENU.

# If you're having problems

**Note: This page only refer to Video Graphics adaptor (VGA) problems.**

## Problems and how to fix them

**The signal is out of range.**

-Change the resolution, horizontal or vertical frequency of your source（PC etc.）.
-Check whether the signal cable is connected from the PC to your TV properly.
-Check the signal input source is connected properly.

**There is a vertical bar or stripe on my TV screen.**

-Turn on the auto configure or change the horizontal or vertical frequency position.

**Screen colours aren't appearing as they should be or single colour.**

-Check if the video signal cable is connected properly.
-Reinstall your PC video card if the signal source is from your computer.

## Maintaining your TV

If you clean your TV carefully and regularly, it helps your TV to last longer. Make sure you turn the power off and unplug the power cord on your TV before you begin to clean it.

## Cleaning the screen

1. Here's a great way to keep the dust off your screen. Wet a soft cloth in a mixture of lukewarm water and a small amount of fabric softener or washing-up liquid. Wring the cloth until it's almost dry and then use it to wipe the screen.
2. Make sure there is no excess water on your TV when you have finished cleaning it.

## Cleaning the plastic parts of your TV

Wipe the plastic parts of your TV with a soft, dry, lint-free cloth. Do not use a wet cloth.

## If you are going to be away for a while

If you are not going to use your TV for a while (such as when you go on holiday), you should unplug the power cord from the socket and disconnect your aerial to protect your TV against possible damage from lightning or power surges.

## Your TV's specification

| | |
|---|---|
| Panel | 16 inch |
| Pixel pitch | 0.252（H）x0.252（V） |
| Resolution | 1366 x 768 |
| Aspect Ratio | 16：9 |
| Display colours | 16.7M |
| Contrast | 500：1 |
| Brightness | 200 cd/$m^2$ |
| Response time | 5 ms |
| Viewing angle | 90（H）/50（V） |
| Backlight life | 50,000 hours |
| Power supply | 12V ⎓ 2A |
| Power consumption | 24 W |
| Speaker | 2x3 W |

**This manual is only for your reference, any change to the design and specification will not be advised.**

## Wall mounting assembly instruction

### Attaching the stand

Place the device face down on a protective surface.Place the stand on the neck of the TV and insert and tighten the screws (found in the accessories box) in the circled area with the screwdriver provided

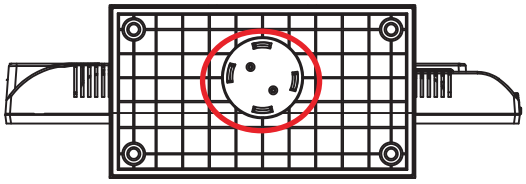

Remove the Stand

To remove the stand remove the screws in the circled area and the neck will come off.

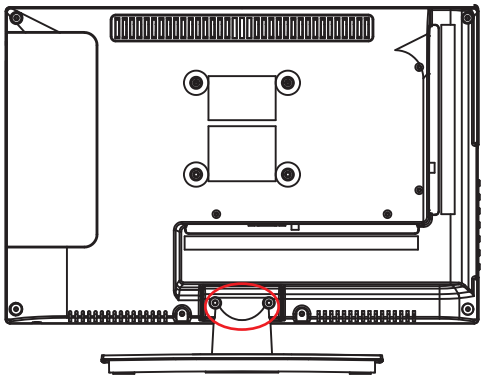

### Wall-mounting the device

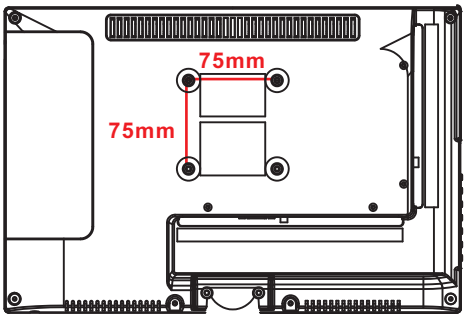


If you are mounting the device,place consult a qualified installer for further insturctions on bracket support and wall support.

Mounting Specification : 75 mm x 75 mm using screw size M4 (not supplied). Length of screw should not exceed 6 mm.

Please Note : The 6 mm length of screw refers to how deep the screw can go inside the mounting holes.

When you're buying screws, you should add the original 6 mm to the thickness of your mounting plate in order to get the total screw length.